



HEADPHONES

1) PLEASE READ AND SET UP THE TRANSMITTER BEFORE THE HEADPHONES

2) PRESS AND HOLD THE POWER
BUTTON TO SWITCH THE
HEADPHONES ON AND OFF

3) TAP THIS BUTTON TO
CHANGE CHANNELS WHEN
USING MULTIPLE TRANSMITTERS



TROUBLESHOOTING

NO AUDIO/MUSIC?

CHECK YOUR DEVICE IS WORKING, CONNECTED CORRECTLY
AND THE VOLUME HAS BEEN TURNED UP FULL.

TRY A DIFFERENT DEVICE OR AUDIO CABLE AND ENSURE THAT
THE HEADPHONES ARE CONNECTED TO THE CORRECT CHANNEL
WITH THE HEADPHONE VOLUME TURNED UP.

HEADPHONES TURN OFF IF NO AUDIO HAS BEEN RECEIVED
FOR 10 MINUTES.



HEADPHONES

TROUBLESHOOTING (CONTINUED)

SIGNAL CUTTING OUT, INTERFERENCE OR REDUCED RANGE?
ENSURE THERE IS NO INTERFERENCE FROM OTHER WIRELESS EQUIPMENT CLOSE BY.

IF YOU'RE USING MORE THAN 2 TRANSMITTERS, ENSURE THEY ARE ON DIFFERENT CHANNELS (SEE TRANSMITTER SHEET)

NO POWER?
HOLD THE POWER BUTTON DOWN FOR TWO SECONDS TO SWITCH THE HEADPHONES ON AND OFF.

NO LIGHT?
IF PLAYING MUSIC WITH NO FLASHING LIGHTS, GENTLY PRESS THE VOLUME CONTROL BUTTON WHEN THE HEADPHONES ARE SWITCHED ON.

ALSO

DO NOT GET THE HEADPHONES WET OR USE OUTDOORS WHEN IT'S RAINING
DO NOT OVERLOAD SOCKETS / DON'T STRESS - GIVE US A CALL